


#### Scope of Supply/Bill of Material & Mounting Drawings

Part Number: H-CRF250L-01-01-SL / H-CRF250L-01-02 Part Description: Head Light Guard –HONDA CRF250 L Applicable to Finished colour versions of Black and Silver

#### Installation / Parts List / Bill of Material for Mounting


| No.   | Description                      | Quantity   | Torque * (N-m)    | Remarks **               |
|---|----------------------------------|------------|-------------------|--------------------------|
| 1   | Head Light Guard                 | 1          |                   |                          |
| 2   | Bracket RH                       | 1          |                   |                          |
| 3   | Bracket LH                       | 1          |                   |                          |
| 4   | M5 Washer                        | 4          |                   |                          |
| 5   | M5 Screw                         | 4          | 10                | Use Liquid Thread Locker |
| SRC D   | esign uses Metric System of Meas | surement a | nd all dimensions | are in Millimeters       |
| * Recommended to use the Torque specified in the table          |                                  |            |                   |                          |
| ** Denotes Usage of Liquid Thread Locker in specified locations |                                  |            |                   |                          |

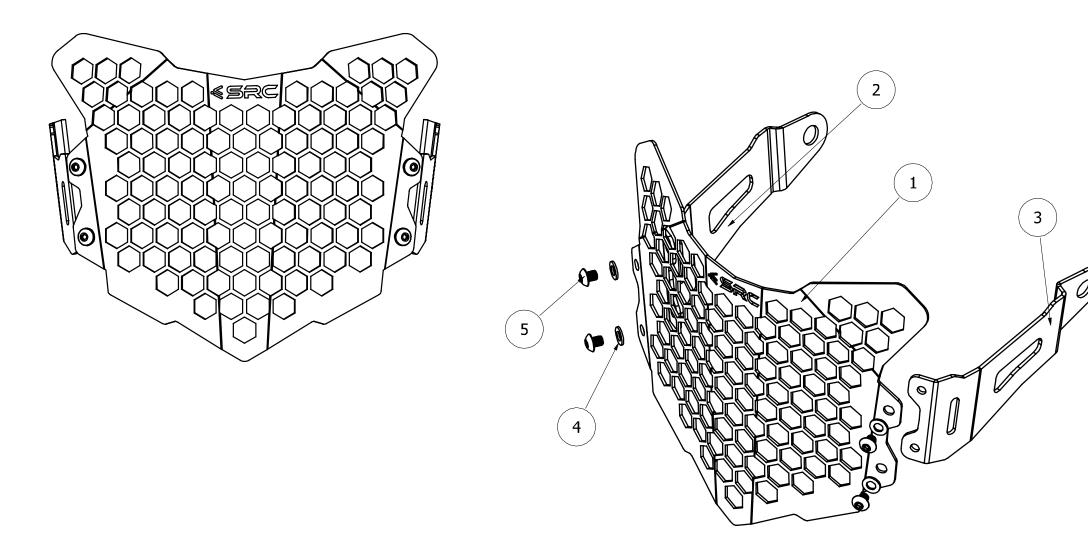



## **≤SRC**

### **MOUNTING DRAWINGS**

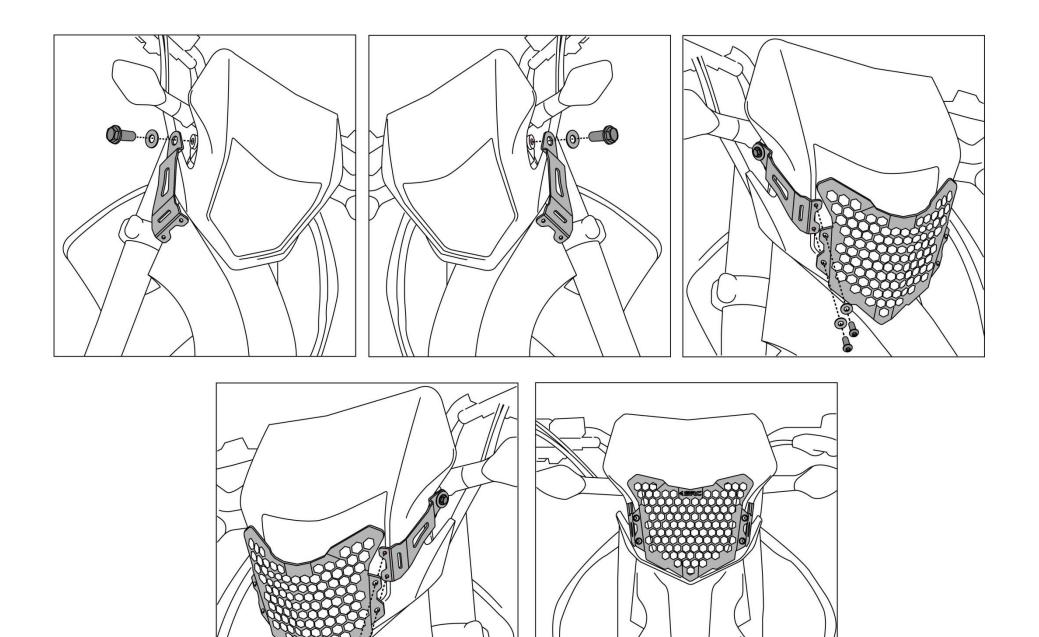



# <\$SRC

**Mounting Instructions** 


## Step 1:

Step 1: Unscrew the Mounting Bolt and Washer, (original fitment in the Motorbike) from both the Right Hand Side and Left Hand Side

Orient the Bracket RH (2), as shown, and slip-in the Washer and Bolt and tighten it fully

Step 2:

Repeat the step on the Left Hand side, to mount the Bracket LH (3)

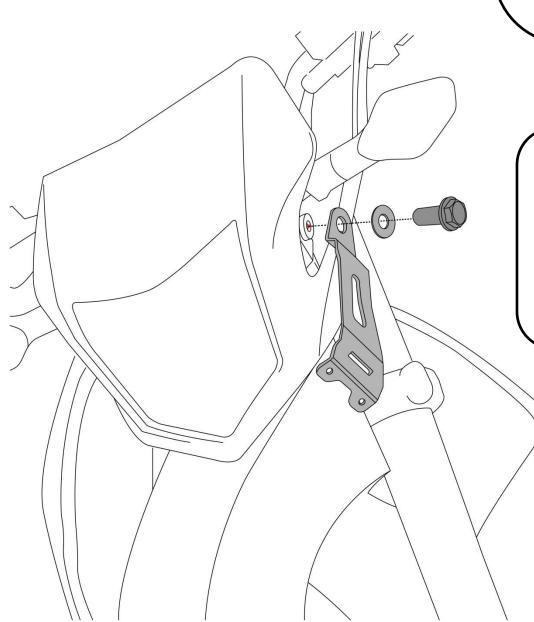




## Step 3:

Orient the Head Light Guard, as shown, to the Bracket (RH) and slipin the M5 Washer (4) and M5 Screw (5) – 2 off, and secure the threads, but not tighten it fully


## Step 4:

Repeat the step, for mounting the Head Light Guard to the Bracket LH, as shown.

0

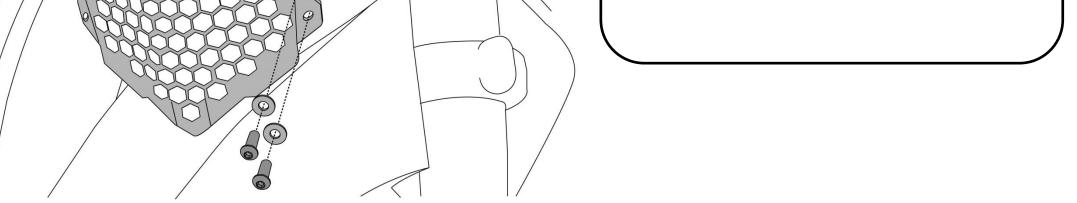



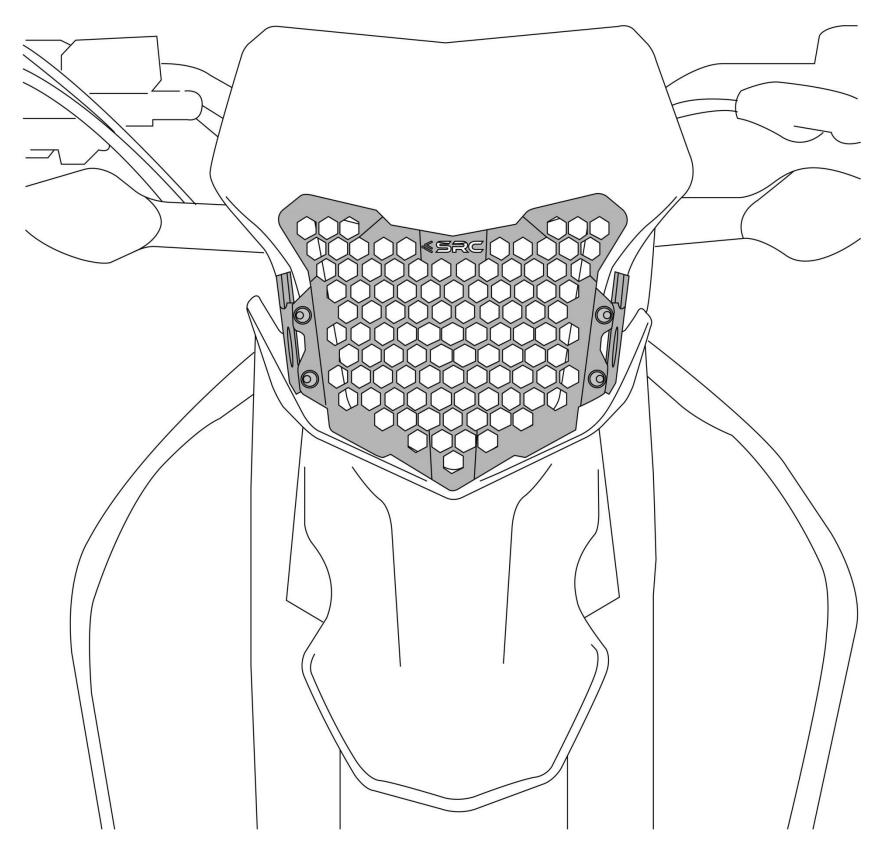

## Step 5:

Step 5: Ensure Orientation, Mounting Symmetry of the Head Light Guard from the front side and tighten the fasteners to torque as specified in the BOM table

The Head Light Guard "As is final Mounted Condition"





### **General Instructions**

1. We request you to pay attention to the Mounting Instructions in this document and follow the step-bystep procedures.

2. This Mounting Instruction manual is a "Do It Yourself" (DIY) fitment manual of the Accessory part to the Vehicle. We have prepared this based on our experience and knowledge, related to the Vehicle, Part and its functional aspects.

3. SRC cannot guarantee the interchangeability of the parts to any other manufacturer's accessory part. It is advised to the User, to inspect and ensure the original state of all other Vehicle parts.

4. We request you to bear in mind, that the Installed part can change the driving behaviour and/or the stability during driving or any other dynamic conditions.

5. If you have the appropriate tools and another person to assist you in the mounting, it will help.

6. After Completion of the Mounting and before taking on a First ride, Ensure and Check all functions of the Vehicle. It is always advised to check loosening of the fasteners after the first 50 kilo meters of ride and at regular intervals.

7. To the maximum extent possible, our design use the current Mounting/Fitment of the Original Equipment, so that Installation of these accessories will not affect the Payload or Function of the Vehicle or the Part on which it is mounted to protect it

8. If any additional modifications are to be done, prior to the fitment of the accessories, it will be explicitly specified in the instruction sheets

Copyright By SRC Design and Specification are subjected to change

Page 6